

Instructions for Canopy kits

WARNING:





Electrical Danger



Turn Power Off


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

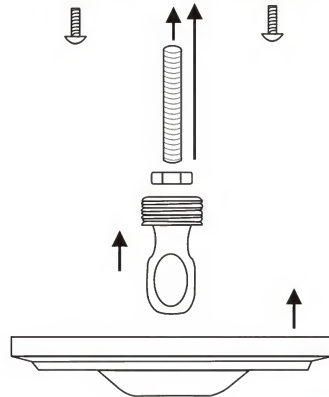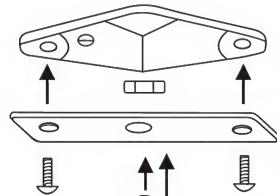


You will need 4 - Can.Bulb
40 Watts Recommended
60 Watts Max
Bulb not included.



USE THE CHAIN
PLIERS OPEN &
CLOSE THE CHAIN.

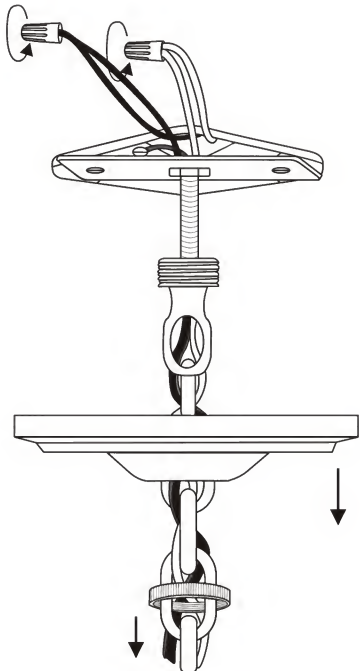

ITEM NUMBER:# 32318 INSTRUCTIONS

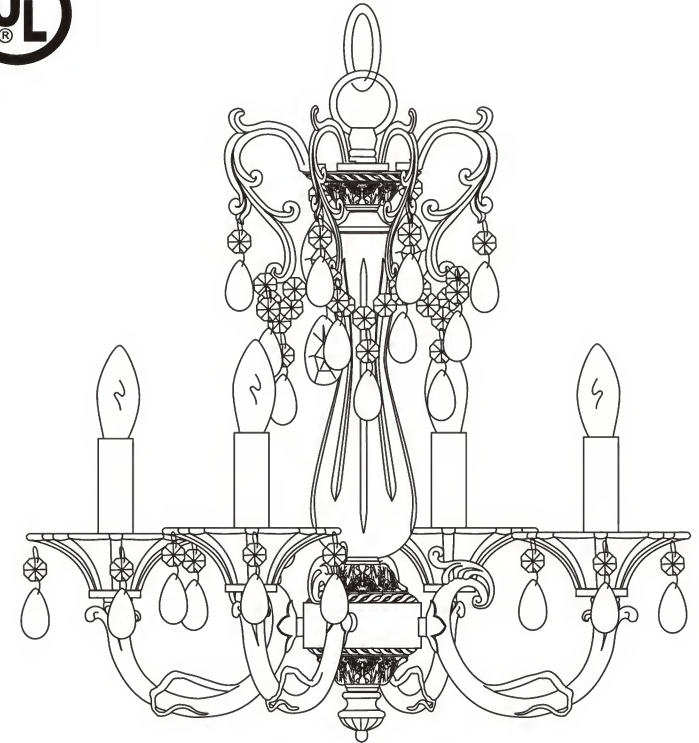

TRIARCH INTERNATIONAL

MODEL#:32318 ASSEMBLY AND DRESSING INSTRUCTIONS


Step 1 (Assembly for your fixture)


A] Carefully unpack your new fixture.


B] Simply turn on the column to attach the fixture body.


Step 2


Hanging the crystal trim to the fixture.


A  (14mm+63mm)*24sets


B  (14mm+48mm)*20sets

C  (14mm*6+A)*8sets

D  (14mm*12+A*2)*4sets

E  (14mm*8+F) 4sets

F  (14mm*2+63mm)*8sets

G  (14mm*7+40mm)*1set

